


## Modernization Kit No. 4750311 Glass Separation Tunnel

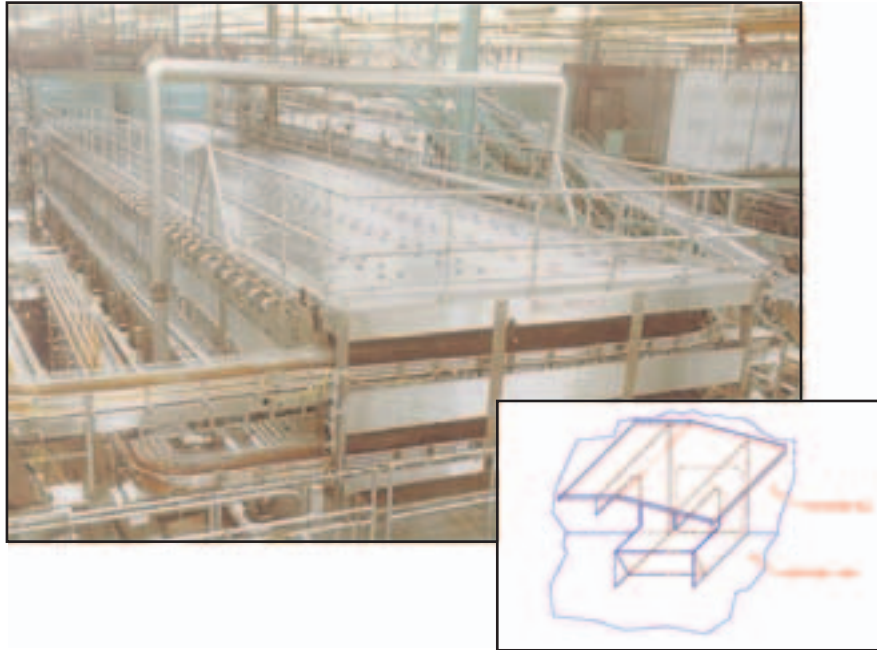

A dramatic reduction in the amount of glass entering the piping system of a pasteurizer can be realized by the installation of the Glass Separation Tunnel Kit. Better process control and reduced maintenance of spray headers results when spray nozzles are kept free of glass.

The bolt on SS cover prevents glass from falling directly in front of the suction box where it could get pulled into the screens. The lower velocity around the perimeter allows glass to settle to the floor before getting close to the suction box entrance. Although the tunnel could be installed in any zone, it would have the quickest payback in the heating, holding, and innermost exchange zones as this is where breakage is most likely to occur.

The tunnel can be fabricated of pieces small enough to fit through the standard man holes and are then bolted together once inside the tank.

Please contact your Barry-Wehmiller Customer Service Department for details.